



PHILIPS

Let's make things better.



Color TV

# Quick Use and Setup Guide



## CONTENTS

Important Notice/Warning	1
Making Basic TV Connections	
Basic Cable TV Connection	1
Basic Cable Box Connection	1
Basic Antenna TV Connection	1
Basic TV Operation	2
Remote Battery Installation	2
Remote Control Button Descriptions	2

How to Use the Installation Features	3-4
Using the Language Control	3
Setting the Tuner Mode A and B Controls	3
How to Automatically Program Channels	3
How to Add and Delete Channels	4
How to set the AutoChron™ Feature (Clock)	4
How to Name (Label) Channels	4

## IMPORTANT

**NOTE:** This owner's manual is used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television set. This is normal and does not require that you contact your dealer or request service.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS UNIT TO RAIN OR EXCESSIVE MOISTURE.**



## BASIC TV CONNECTIONS

### CABLE TV

Your Cable TV input into your home may be a single (75 ohm) cable or a converter box installation. In either case, the connection to the TV is very easy. Follow the steps below to connect your cable signal to your new television.

 
If your cable signal comes directly from a round 75Ω coaxial cable use the following steps:

- 1 Connect the open end of the round Cable Company supplied cable to the 75Ω input on the TV. Screw it down finger tight.
- 2 Plug the television in to the wall outlet and turn the TV on. Refer to the AUTOPROGRAM feature to program all the available channels on your cable signal.


If your cable signal comes from a cable box, use the following steps:

- 3 Connect the open end of the round Cable Company supplied cable to the cable signal IN(put) plug on the back of the Cable Box.
- 4 Using a separate round coaxial cable, connect one end to the OUT(put) plug on the back of the Cable Box.
- 5 Connect the other end of the round coaxial cable to the 75Ω input on the back of the television. Screw it down finger tight.
- 6 Plug the television in to the wall outlet and turn the TV on. Refer to the TUNER and AUTOPROGRAM features on page 3 of this Quick Use Guide. TUNER should be set to the CABLE option. AUTOPROGRAM can be set to program all the available channels on your cable signal into the television's memory.

#### Direct Cable Connection:

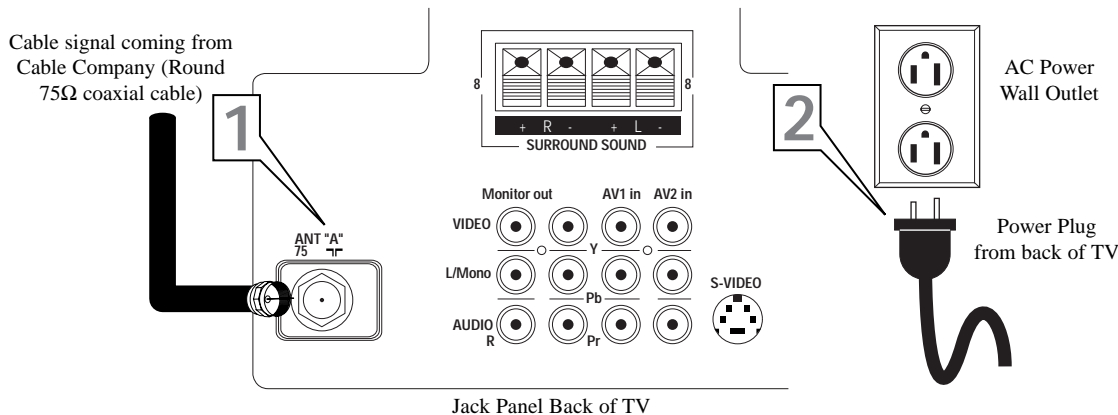

#### Cable Box Connection:

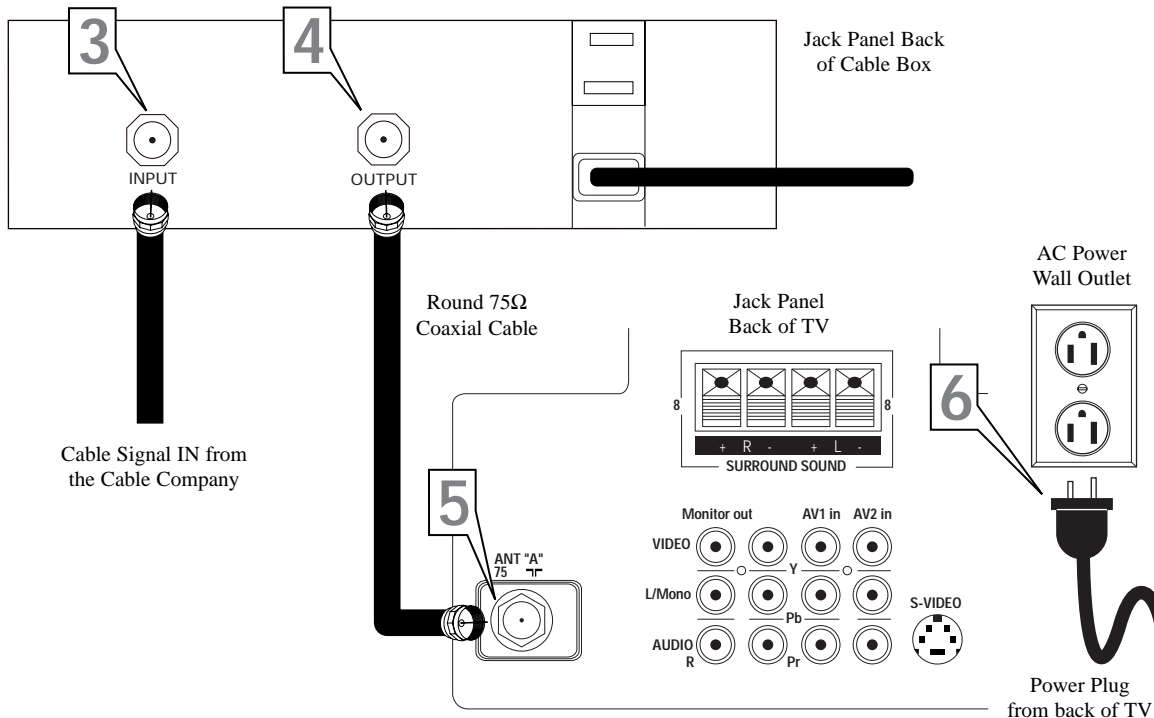 


### ANTENNA TV

A combination antenna receives normal broadcast channels (VHF 2-13 and UHF 14-69). Your connection is easy because there is only one 75Ω (ohm) antenna plug on the back of your TV, and that's where the antenna goes.

- 1 If your antenna has a round cable (75 ohm) on the end, then you're ready to connect it to the TV. If your antenna has flat, twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300- to 75-ohm adapter.
- 2 Push the round end of the adapter (or antenna) onto the 75Ω (ohm) plug on the back of the TV. If the round end of the antenna wire is threaded, screw it down finger tight.
- 3 Plug the television in to the wall outlet and turn the TV on. Refer to the TUNER and AUTOPROGRAM features on page 3 of this Quick Use Guide. TUNER should be set to the ANTENNA option. AUTOPROGRAM can be set to program all the available channels on your cable signal into the television's memory.
 
#### Antenna Connection:

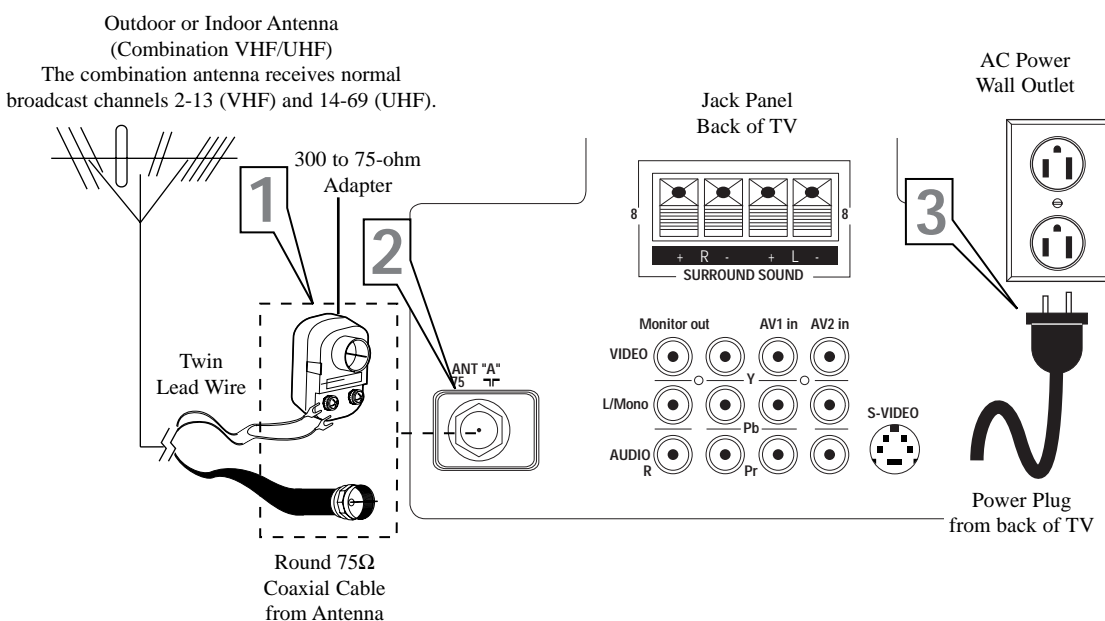


# BASIC TV AND REMOTE OPERATION

## TELEVISION

Your television has a set of controls located on the top of the cabinet for use when the remote control is not needed.

- 1 Press the POWER button** to turn the TV ON.  
**Note:** The time it takes the TV to startup can be affected by the AutoChron™ feature (page 4). With AutoChron ON, the TV will search for a PBS channel to set the clock before powering itself on. This can take several seconds.
- 2 Press the VOLUME (+) button** to increase the sound level **or the VOLUME (–) button** to lower the sound level.  
**Pressing both buttons at the same time** will display the onscreen menu. After you are in the menu, use these buttons to make adjustments or selections.
- 3 Press the CHANNEL – (down) or + (up) button** to select TV channels. Use these buttons to make adjustments or selections in the onscreen menu.

 There is also a set of Audio and Video Input jacks located on the side of the television cabinet. This jack panel also contains a S-video and headphone jack. These jacks are great for connecting a video camcorder or any accessory device that will only be hooked up temporarily.

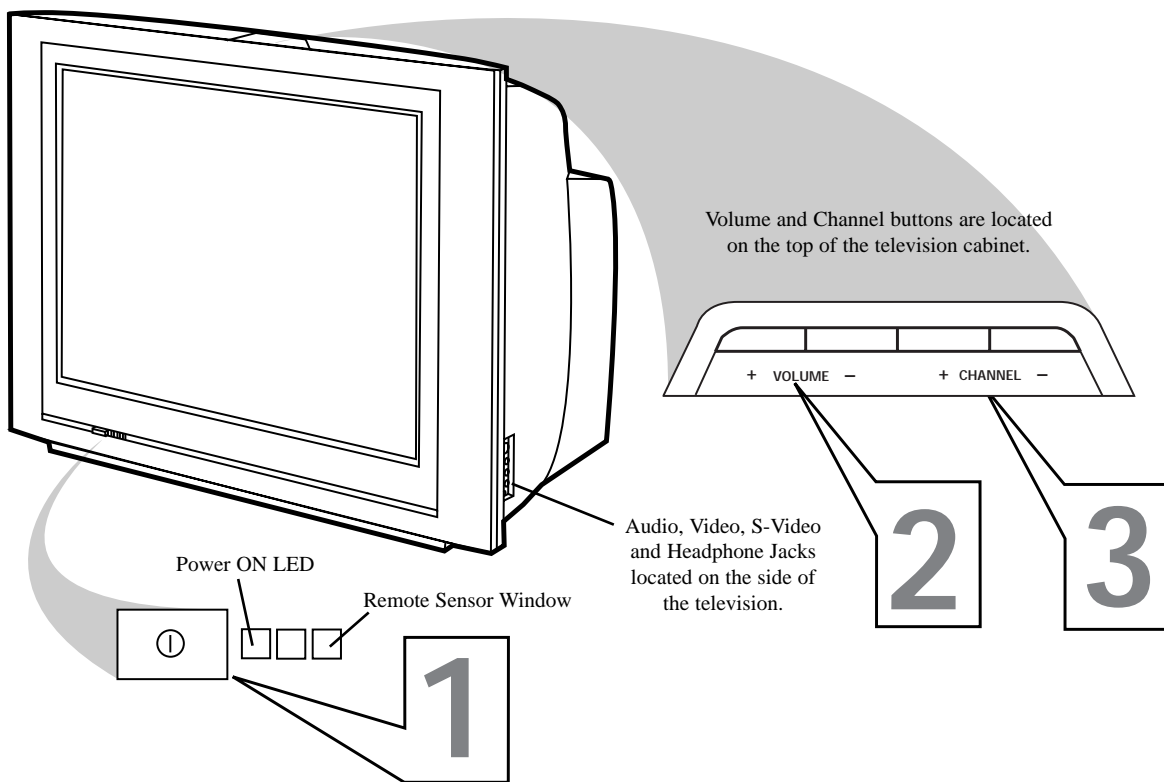


## REMOTE CONTROL BATTERIES

To load the supplied batteries into the remote:

- 1 Remove the battery compartment door** on the back of the remote.
- 2 Place the batteries (2-AA) in the remote.** Be sure the (+) and (–) ends of the batteries line up correctly (the inside of the case is marked).
- 3 Reattach the battery compartment door.**

 Be sure to point the remote at the Remote Sensor window on the front of the television when using the remote control to operate the television.

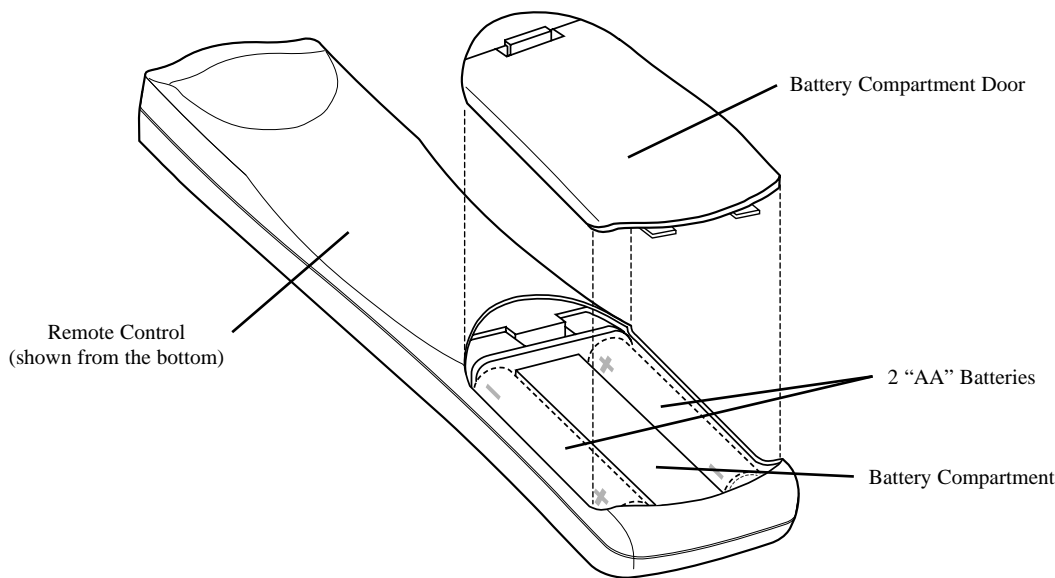

## REMOTE CONTROL BUTTONS

### Sleep Button

Press to set the TV to automatically turn itself OFF. Press to set the TV to automatically turn itself OFF after a period of time. Choose 15, 30, 45, 60, 90, 120, 180, or 240 minute before the TV will automatically turn off.

### Status/Exit Button

Press to see the current channel number on the TV screen. Also press to clear the TV screen after control adjustments.

### TV/VCR/ACC Mode Switch

Slide to the TV position to control TV functions, to the VCR position to control VCR functions, or to the ACC position to control the functions of accessory devices (a cable converter, DBS, or DVD, for example).

### Multimedia Button

Press repeatedly to select the different signal sources connected to the A/V inputs on the TV.

### VCR-Record Button

Press to start the recording of a videotape.

### Incr. Surr. Button

Press to set various factory Surround Sound listening modes.

### Number Buttons

Press the number buttons to select TV channels. When selecting single-digit channels, press the number of the desired channel. The TV will pause for a few seconds and then tune to the selected channel. (Note: You can press 0, then the number also.) For channels 100 and above, first press 1 then the next two numbers of the desired channel.

### Sound Button

Press to select an AutoSound™ control. Choose from three factory-set controls (VOICE, MUSIC, and THEATRE) and a PERSONAL control that you set according to your own preferences through the onscreen Sound menu. The three factory-set controls will tailor the TV sound so as to enhance the particular type of program you are watching.

### Menu Button

Press for the onscreen menu to appear. Pressing the menu button after menu selections are made will eliminate the menu from the display.

### Cursor Buttons (Left, Right, Up, Down)

Press these buttons to highlight, select, and adjust items on the TV's onscreen menu.

### Volume (+) or (–) Buttons

Press to adjust the TV sound level.

### Mute Button

Press to turn the TV sound OFF. Press again to return the sound to its previous level.

### Power Button

Press to turn the TV ON and OFF.

### CC Button

Press to select Closed Captioning options within the menu. (See the *Instructions for Use* manual for details.)

### Light Button

Press to back-light the buttons on the remote control.

### Clock Button

Press the CLOCK button to access the onscreen Clock menu.

### TV/VCR (A/CH) Button

**TV/VCR** – Press while in the VCR mode (the VCR indicator on the front of the VCR will light) to view the playback of a tape. Press again to place in the TV position (the VCR indicator light will go off) to view one program while recording another program.  
**A/CH** – Press to toggle between the currently viewed channel and the previously viewed channel.

### Program List Button

Press to display a list of channel numbers and their names (see the "Tuner," "Auto Program," "Channel Edit," and "Name" sections on pages 3 and 4 for proper setup). Each channel will appear as a selectable menu item. The current channel will be highlighted by default. Only five channels will be shown onscreen at one time; press the CURSOR UP or CURSOR DOWN button to scroll the list and highlight a channel. Press the CURSOR RIGHT button to tune to the highlighted channel. Channels marked "Skipped" in the "Channel Edit" control will not appear in the list. Each channel that is being blocked by AutoLock™ will appear with a padlock icon to indicate that the channel is not viewable.

### Picture Button

Press to select an AutoPicture™ control. Choose from four factory-set controls (MOVIES, SPORTS, WEAK SIGNAL, and MULTI MEDIA) and a PERSONAL control that you set according to your own preferences through the onscreen PICTURE menu. The four factory-set controls will tailor the TV picture so as to enhance the particular type of program you are watching, or to improve the picture of a program that has a weak signal.

### Surf Button

 
Press to select previously viewed channels. You can place up to 10 channels in memory. Then by pressing the SURF button you can quickly view the select channels. (See the "Using the Channel Surf Control" section in your *Instructions for Use* manual to see how to select a series of channels using the Surf button.)

### VCR ◀◀, ■, ▶▶, II Buttons

Press to rewind, stop, play, fastforward, or pause a videotape.

### Channel (+) or (–) Buttons

Press to change the tuned channel.

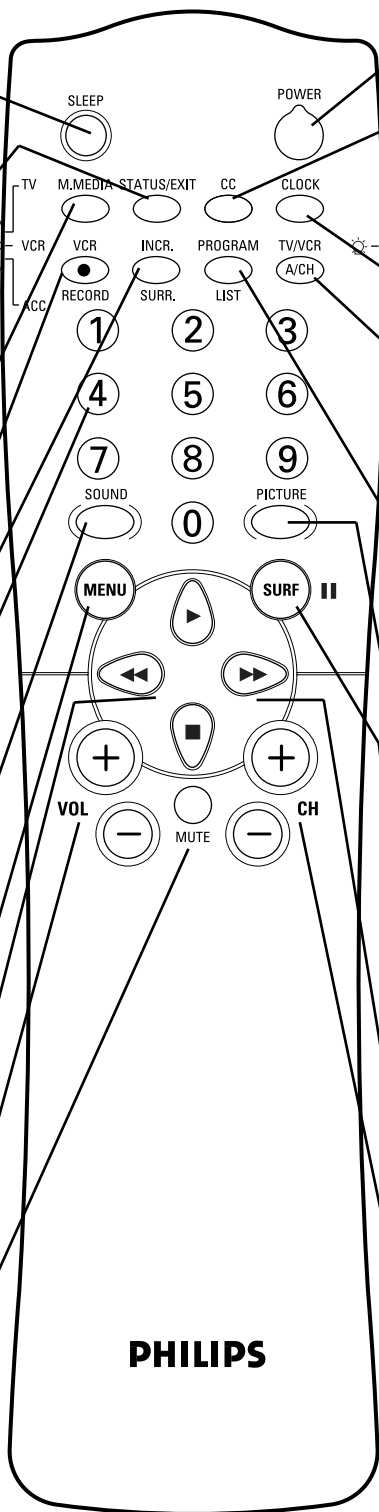





# HOW TO USE THE INSTALLATION FEATURES

## LANGUAGE

For or Spanish- and French-speaking TV owners, an onscreen LANGUAGE option is present. The LANGUAGE control enables you to set the TV's onscreen menu to be shown in either English, Spanish, or French.

  - 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until INSTALL is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left and highlight LANGUAGE.
- 4 Press the **CURSOR RIGHT** button to highlight the LANGUAGE control options.
- 5 Press the **CURSOR UP** or **CURSOR DOWN** button to select ENGLISH, ESPANOL (Spanish), or FRANCAIS (French).
- 6 Press the **STATUS/EXIT** button to clear the menu from the screen.

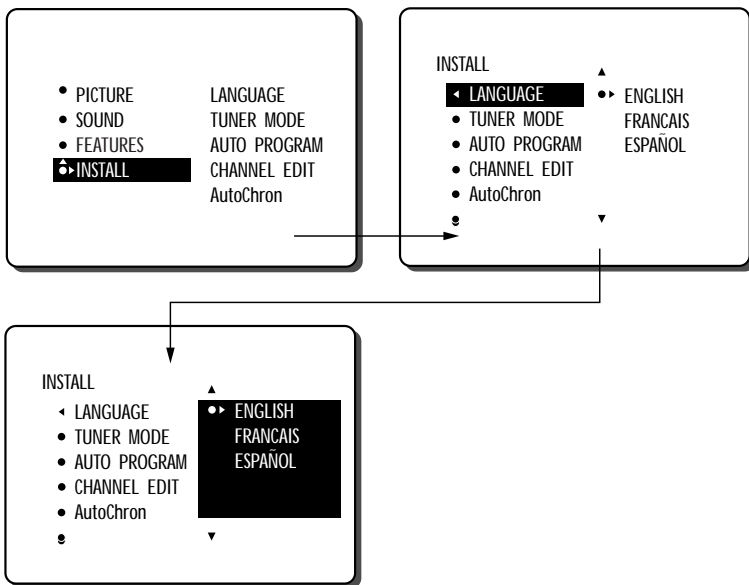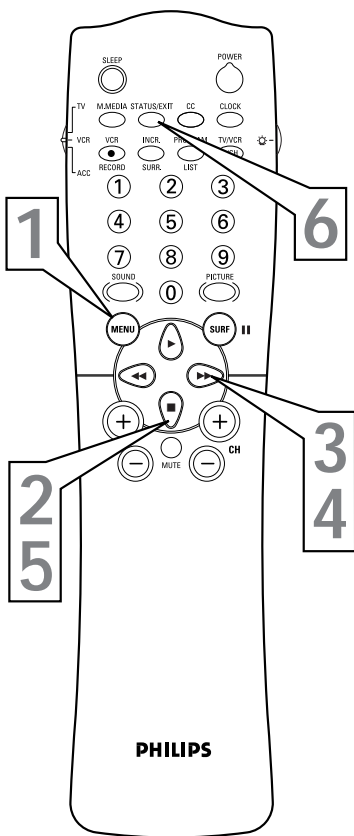

### HELPFUL HINT

 
 
Remember, the LANGUAGE control makes only the TV's onscreen MENU items appear in English, Spanish, or French text. It does not change the other onscreen text features, such as Closed Captioning (CC), with TV shows.

## TUNER MODE

The TUNER MODE feature allows you to change the TV's signal input to CABLE, ANTENNA, or AUTO. It's important for the TV to know if you want to receive channels from a cable TV signal or a normal antenna signal.

**NOTE:** The AUTO mode setting helps the TV determine the type of signal or channels being received when AUTO PROGRAM is activated.

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until INSTALL is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left.
- 4 Press the **CURSOR DOWN** button to highlight the TUNER MODE control.
- 5 Press the **CURSOR RIGHT** button to highlight the tuner options.
- 6 With the TUNER MODE control set to AUTO, Auto Program (see below) will detect whether or not cable input is present.
- 7 Press the **STATUS/EXIT** button to clear the menu from the screen.

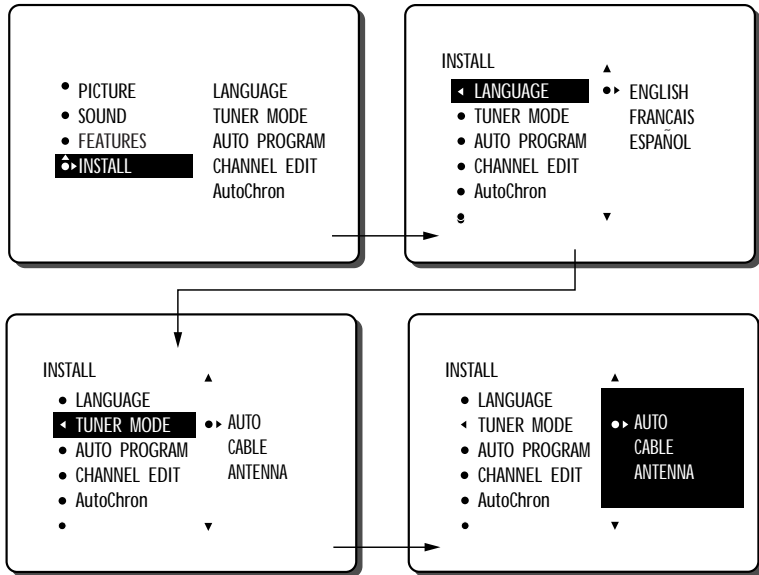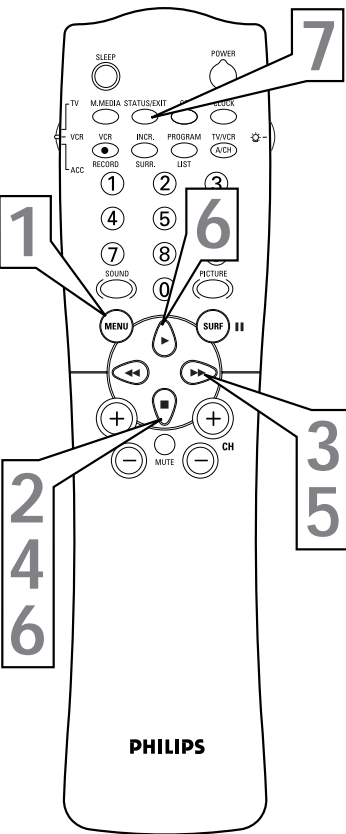



### HELPFUL HINT

When CABLE is selected, channels 1–125 are available.  
When ANTENNA is selected, channels 2–69 are available.

## AUTO PROGRAM

Your TV can automatically set itself for local area (or cable TV) channels. This makes it easy for you to select only the TV stations in your area by pressing the CHANNEL (+) or (–) button.

  - 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until INSTALL is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. LANGUAGE will be highlighted.
- 4 Press the **CURSOR DOWN** button repeatedly until the AUTO PROGRAM control is highlighted.
- 5 Press the **CURSOR RIGHT** button to start the Auto Program scanning of channels.
- 6 Press the **STATUS/EXIT** button to clear the menu from the screen.

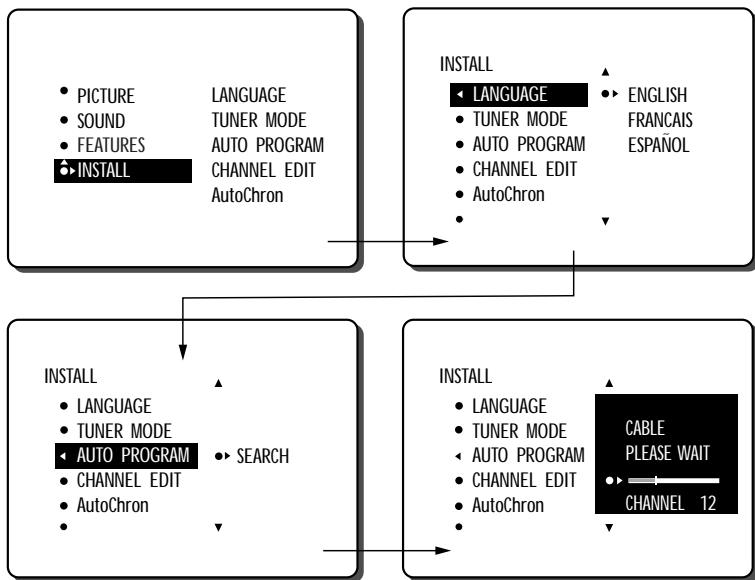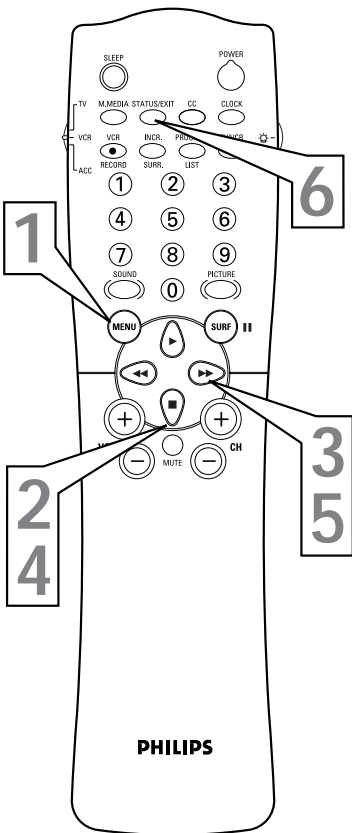

### HELPFUL HINT

After you've run Auto Program, check out the results. Press the CHANNEL (+) or (–) button and see which channels you can select. Remember, an antenna or cable TV signal must first be connected to your TV (see instructions for making connections on page 1 of this guide).

 
 
# HOW TO USE THE INSTALLATION FEATURES

## CHANNEL EDIT

*CHANNEL EDIT makes it easy for you to add or delete channels from the list of channels stored in the TV's memory.*

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4 Press the **CURSOR DOWN** button repeatedly until the **CHANNEL EDIT** control is highlighted.
- 5 Press the **CURSOR RIGHT** button to access the **CHANNEL EDIT** menu.
- 6 Press the **CURSOR UP** or **CURSOR DOWN** button to scroll through the list of available channels. Or press the number buttons on your remote control to select a specific channel (for example, press 0 and then 2 to select channel 2).
- 7 With the channel you want to edit selected, press the **CURSOR RIGHT** button to mark the channel as **SKIPPED**. The channel you've marked **SKIPPED** will not appear when you are changing from channel to channel while watching TV.

**NOTE:** When you want to add a channel that has been marked **SKIPPED**, press the **CURSOR UP** or **CURSOR DOWN** button to highlight the channel; then press the **CURSOR RIGHT** button to remove the word **SKIPPED**.

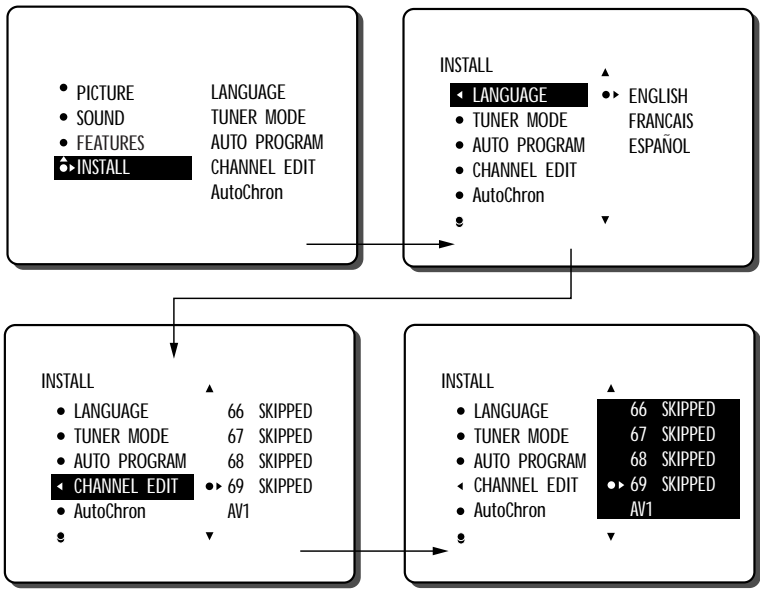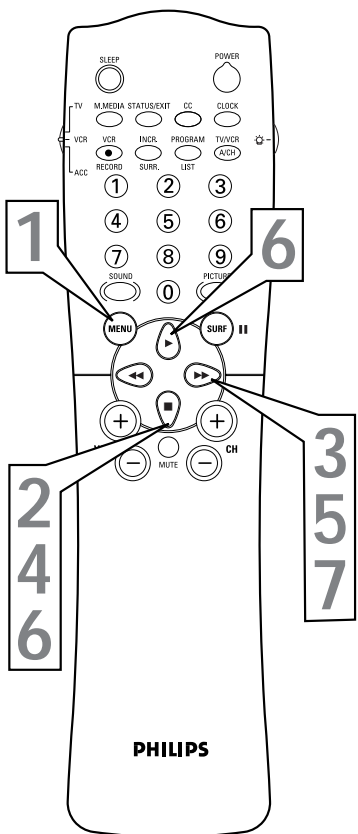

### HELPFUL HINT

 
The channels available for you to edit are the ones that the **AUTO PROGRAM** feature found through a search of your TV antenna or cable TV signals. Channels not found during the search are marked **SKIPPED**.

## AUTOCHRON™


*AutoChron™ can automatically set the TV's onscreen clock. Because the time is received from a broadcast signal, you must be sure that a cable TV or antenna signal is present before you attempt to use the AutoChron™ feature.*

- 1 Press the **MENU** button on the remote to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4 Press the **CURSOR DOWN** button until the **AutoChron** control is highlighted.
- 5 Press the **CURSOR RIGHT** button to start the AutoChron™ feature. Then just follow the onscreen instructions to set the clock.
- 6 Press the **CURSOR RIGHT** button to select **AUTO**. Within a few seconds, a menu for choosing your time zone will appear.
- 7 Press the **CURSOR UP** or **CURSOR DOWN** button to highlight your correct time zone.
- 8 With your correct time zone highlighted, press the **CURSOR RIGHT** button. Within a few seconds, you will be given the option to choose whether you want to select Daylight Savings Time.
- 9 Press the **CURSOR UP** or **CURSOR DOWN** button to navigate through the YES and NO selection list; then with the item you want to select highlighted, press the **CURSOR RIGHT** button. Follow the onscreen instructions (shown below) to set the AutoChron™ time either automatically or manually.

### Setting the AutoChron Feature Automatically:

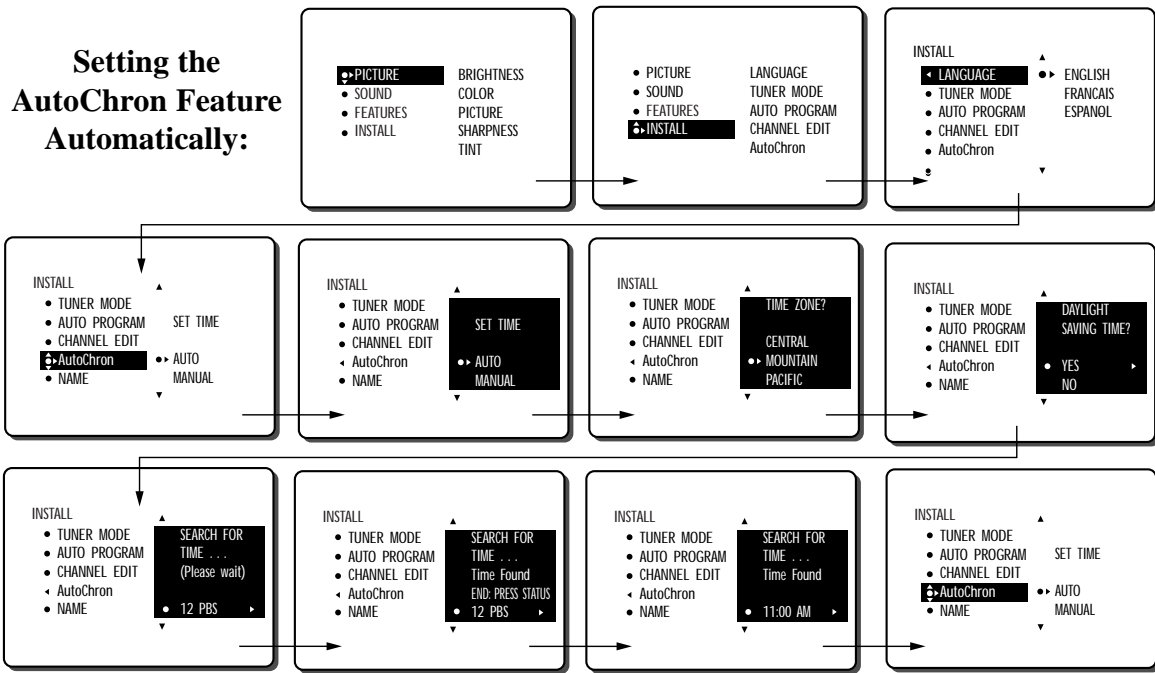

### Setting the AutoChron Feature Manually:


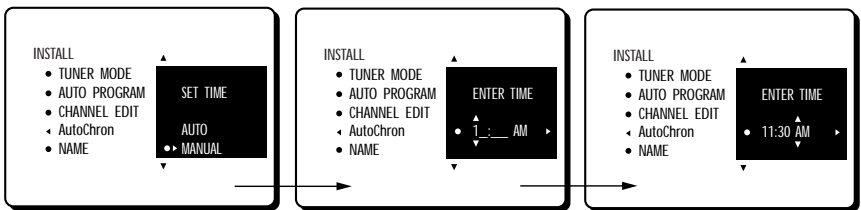 


**Note:** When turned ON, the AutoChron™ feature can affect the start up of your television. When the power button is pressed and the AutoChron™ feature is set to the **AUTO** position, the TV will scan the channels for a PBS channel to set the clock automatically. It may take **SEVERAL** seconds before the TV powers itself ON.

## NAME

  *The channel NAME feature allows you to list the "call" letters of your favorite stations beside their channel numbers when they appear on the screen. The TV has in memory a list of the 50 most popular channel names (for example, ABC, NBC, FOX, etc.). You also can enter a custom name (up to five characters).*

- 1 Press the **MENU** button on the remote control to show the onscreen menu.
- 2 Press the **CURSOR DOWN** button repeatedly until **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** button to shift the menu to the left. **LANGUAGE** will be highlighted.
- 4 Press the **CURSOR DOWN** button repeatedly until the **NAME** control is highlighted.
- 5 Press the **CURSOR RIGHT** button to highlight the **NAME** options area.
- 6 Press the **CURSOR RIGHT** button again; then press the **CURSOR UP** or **CURSOR DOWN** button to scroll through a list of options for the first character (A through Z, 0 through 9). Press the **CURSOR RIGHT** button and repeat for the second, third, fourth, and fifth characters.
- 7 After you have selected a name for the channel, press the **MENU** button to save the name in the TV's memory.
- 8 Press the **STATUS/EXIT** button to clear the menu from the screen.

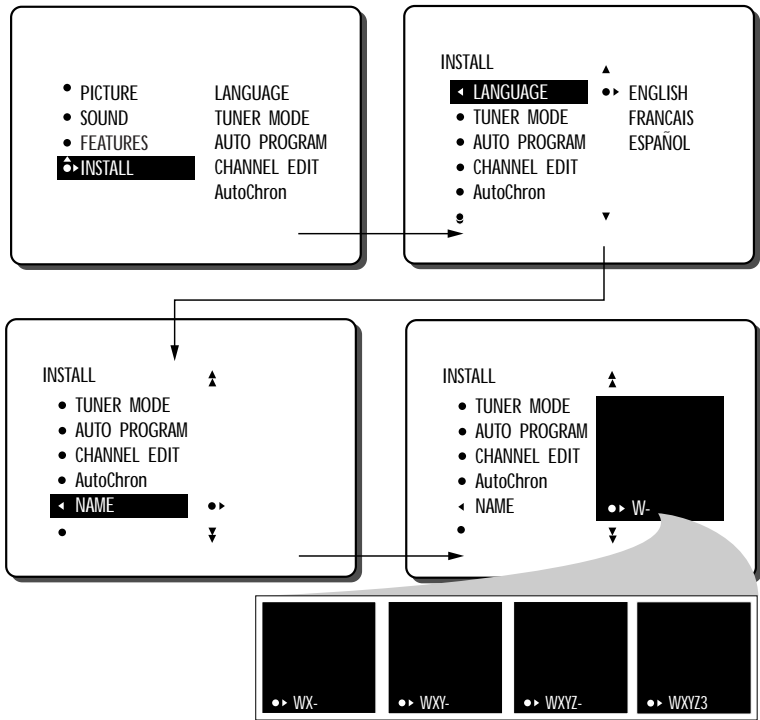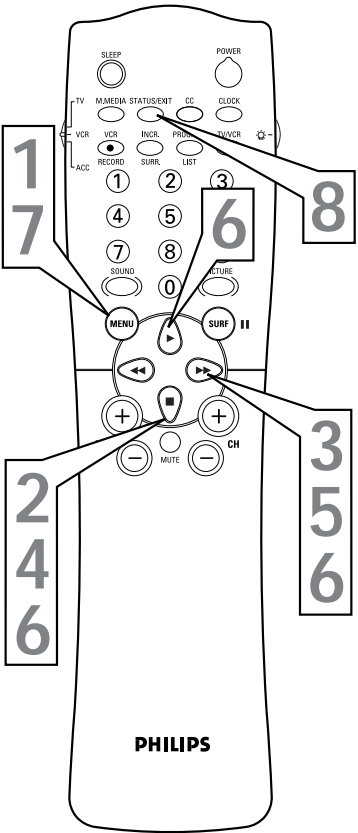

### HELPFUL HINT

The five characters that the channel **NAME** feature allows you to input can be letters, a dash character, or the numbers 0 through 9.